

	COD.	POMPE SCARICO LT-LS	POMPES DECHARGE LT-LS	ABFLUSSPUMPEN LT-LS	DRAIN PUMPS LT-LS	BOMBAS DESCARGA LT-LS
1	15-890-051	PANNELLO LS330 + FORD-AI-	PANNEAU LS330	TAFEL LS330	PANEL LS330	PANEL LS330
"	15-890-052	PANNELLO LS400 + FORD-AI-	PANNEAU LS400	TAFEL LS400	PANEL LS400	PANEL LS400
"	15-890-053	PANNELLO LS385 + FORD-AI-	PANNEAU LS385	TAFEL LS385	PANEL LS385	PANEL LS385
"	15-890-054	PANNELLO LS605 + FORD-AI-	PANNEAU LS605	TAFEL LS605	PANEL LS605	PANEL LS605
2	69-000-208	FILTRO POMPA LS BIANCO	FILTRE DECHARGE LS	AUSFLUSSFILTER LS	LS DISHARGE FILTER	FILTRO DESAGOTE LS
3	38-228-027	TUBO SCARICO CON CURVA-PL	TUBE DECHARGE	ABFLUSSROHR	DRAIN PIPE	TUBO DESCARGA
4	15-880-055	PANNELLO LT + FORD -AI-	PANNEAU LT	TAFEL LT	PANEL LT	PANEL LT
5	36-306-012	MANICOTTO POMPA SCAR.-GM-	MANCHON POMPE DECHARGE	MUFFE ABFLUSSPUMPE	COUPLING DRAIN PUMP	MANGUITO BOMBA DESCARGA
6	69-000-076	FASCETTA ABA D.26-38 FE.Z	SEGMENT D.26-38	SHELLE D.26-38	CLAMP DIAM.26-38	ABRAZADERA D.26-38
7	34-013-010	POMPA SCAR.+FILTRO LT	POMPE DECHARGE + FILTRE	ABFLUSSPUMPE + FILTER	DRAIN PUMP + FILTER	BOMBA DESCARGA + FILTRO
8	36-301-012	MANICOTTO SCARICO LT -GM-	MANCHON DECHARGE LT	ABFLUSSMUFFE LT	LT DRAIN COUPLING	MANGUITO DESCARGA LT
9	69-000-207	CORPO FILTRO POMPA LS	CORPS FILTRE DECHARGE LS	KOERPER AUSFLUSSFILTER	BODY DISCHARGE FILTER	CUERPO FILTRO DESAGOTE
10	34-200-036	RELE' 2 CONTATTI V,220	RELE' V,220	RELE' V,220	RELE' V,220	RELE' V,220
11	38-228-027	TUBO SCARICO CON CURVA-PL	TUBE DECHARGE	ABFLUSSROHR	DRAIN PIPE	TUBO DESCARGA
"	38-228-028	TUBO SCARICO DIRITTO -PL-	TUBE DECHARGE	ABFLUSSROHR	DRAIN PIPE	TUBO DESCARGA
12	34-013-015	POMPA SCARICO LS	POMPE DECHARGE LS	ABFLUSSPUMPE LS	LS DRAIN PUMP	BOMBA DESCARGA LS
13	34-050-033	TIMER P26 2 CAMME 2'	TIMER P26	TIMER P26	TIMER P26	TIMER P26
14	36-306-002	MANICOTTO MAND.MM.46 -GM-	MANCHON MM.46	MUFFE MM.46	COUPLING MM.46	MANGUITO MM.46